

Screwdrivers and torque wrench.

Manual screwdrivers

Screwdriver Manual Ball Abutment 22 mm	29026
Screwdriver Manual Unigrip™ 20 mm	29148
Screwdriver Manual Unigrip™ 28 mm	29149
Screwdriver Manual Unigrip™ 36 mm	29150
Screwdriver Manual Multi-unit 25 mm	29156
Screwdriver Manual Multi-unit Brånemark System™ WP 25 mm	29157

Machine screwdrivers

Screwdriver Machine Ball Abutment 24 mm	29027
Screwdriver Machine Unigrip™ 20 mm	29151
Screwdriver Machine Unigrip™ 25 mm	29152
Screwdriver Machine Unigrip™ 30 mm	29153
Screwdriver Machine Unigrip™ 35 mm	29154
Screwdriver Machine Multi-unit 21 mm	29158
Screwdriver Machine Multi-unit Brånemark System™ WP 20 mm	29159

Locator® Latch Type Torque Wrench Driver 23 mm	REF08913
Locator® Latch Type Torque Wrench Driver 29 mm	REF08914

Screwdriver/Activator	29163
Locator® Core Tool	REF08393
Locator® Male Removal Tool (new tip only)	REF08397
Locator® Abutment Driver (gold end only)	REF08390

Manual Torque Wrench Prosthetic	29165
Manual Torque Wrench Adapter Prosthetic	29167

